


# TECHNICAL MANUAL



## VS10-C

10075 ANURA Vibration sensor powered by rechargeable battery

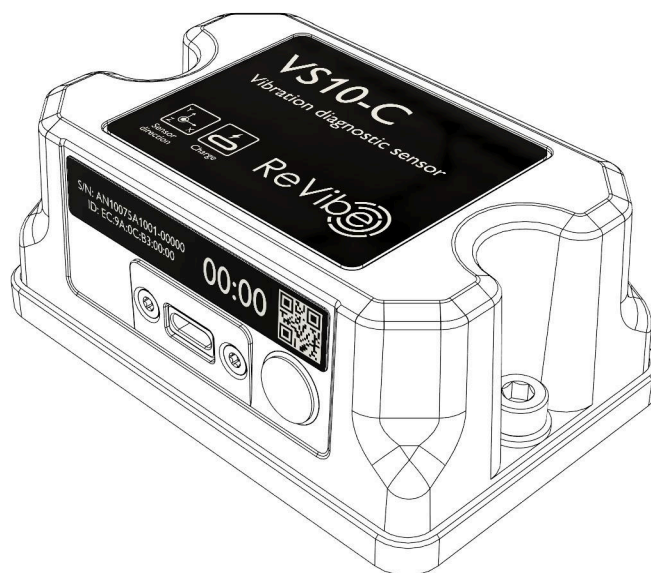

<b>INTRODUCTION.....</b>	<b>3</b>
<b>PACKAGE CONTENTS.....</b>	<b>3</b>
<b>SETTINGS.....</b>	<b>3</b>
Raw Vibration Data.....	3
Health Monitoring.....	3
<b>OPERATION.....</b>	<b>4</b>
<b>POWER MODES.....</b>	<b>4</b>
1. Powering On:.....	4
2. Powering Off:.....	4
<b>CHARGING.....</b>	<b>4</b>
<b>INSTALLATION.....</b>	<b>5</b>
<b>FIRMWARE UPDATES.....</b>	<b>6</b>
<b>PRODUCT CARE.....</b>	<b>6</b>
General use:.....	6
Cleaning:.....	6
<b>SUPPORT, WARRANTY &amp; RMA ASSISTANCE.....</b>	<b>6</b>
<b>RECYCLING.....</b>	<b>6</b>
<b>VS10-C TECHNICAL SPECIFICATION.....</b>	<b>7</b>
Power supply:.....	7
Power consumption:.....	7
Enclosure material:.....	7
Ingress protection:.....	7
Typical weight (w/ 3x 25mm pot magnets) :.....	7
Dimensions (excluding mounting accessories):.....	7
Dimensions: (w. 2x 32mm pot magnets.).....	7
Operating Temperature:.....	7
Storage Temperature:.....	8
Relative humidity:.....	8
Mounting interface:.....	8
Radio communication:.....	8
Acceleration measurements:.....	8
Temperature sensor measurement accuracy:.....	9
Edge data storage:.....	9
Time synchronization offset:.....	9
Expected product lifetime:.....	9
<b>Bounding box.....</b>	<b>9</b>
<b>Accelerometer position.....</b>	<b>10</b>
<b>CONTACT.....</b>	<b>11</b>
Manufacturer:.....	11

# INTRODUCTION

The **VS10-C (10075)** is a battery-powered sensor designed to wirelessly transmit captured measurement data.

The VS10-C is designed to work with the TR1 (10064) or TR1-USB (10078) transceivers, utilizing the 2.4GHz spectrum for communication.

# PACKAGE CONTENTS

Name:	Part no:
VS10-C Vibration sensor	10075

# SETTINGS

The VS10-C measures, collects, and transmits the following data while allowing user configuration:

## Raw Vibration Data

The VS10-C captures and transmits snippets of raw acceleration data (g) from the X, Y, and Z axes at user-defined sample rates and intervals.

- **Sample Rate::**
  - 512 Hz
  - 1024 Hz
  - 2048 Hz
  - 4096 Hz
  - 8192 Hz
  - 16384 Hz
- **Interval:**  
How often the sensor records samples.
- **Duration:**  
Set the length of each sample.

## Health Monitoring


The VS10-C provides real-time status updates, including operational health and connectivity, at user-defined intervals. The following parameters are monitored and sent by the sensor every minute:

- **Temperature** (°C)
- **RSSI** (dBm)
- **Voltage** (mV)

For detailed configuration instructions, refer to the **Vibreshark Manual**.

# OPERATION

The VS10-C sensor is designed for field diagnostic measurements and features a compact, rechargeable design.

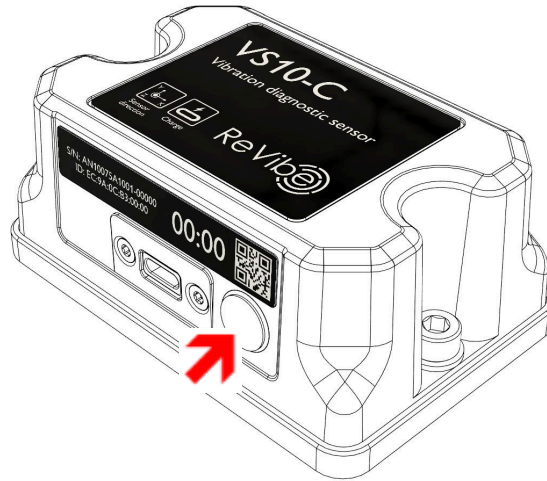

# POWER MODES

## 1. Powering On:

1. Press the power button located near the USB-C port on the side of the unit.
2. Press once— the button will turn green. (If the VS10-C is discharged, it will blink red rapidly.)
3. The LED will blink green to indicate that the sensor is active and recording movement.

## 2. Powering Off:

1. Press and hold the power button near the USB-C port on the side of the unit.
2. The button will turn red, indicating the unit is off.
3. Release the button.

**Note:** To conserve battery life, the unit will automatically power off after 30 minutes if it is not connected.

# CHARGING

The VS10-C has a USB-C connector for charging. It can be powered using a power bank or a USB-charger. (See Specifications, Power supply)

1. Check Compatibility – Ensure the charger supports USB-C charging.
2. Connect the USB into the VS10-C charging port.
3. Confirm Charging – The power button indicates the charging state with the following colors.
  - a. Charging (Blue)
  - b. Charged (Green)

# INSTALLATION

The VS10-C attaches to the measurement target in two ways:

- **Temporary installation:** Powerful neodymium magnets provide a strong yet removable attachment.
- **Permanent installation:** The unit can be secured using M6 screws from the top, mounted from the bottom with M5 screws, or affixed with double-sided adhesive for a more permanent setup.

## FIRMWARE UPDATES

The VS10-C supports over-the-air upgrades using BLE, allowing users to update its firmware through the API or SDK.

## PRODUCT CARE

To ensure the longevity and optimal performance of VS10-C, please follow these care instructions:

### **General use:**

Do not drop, throw, or subject the product to excessive force, as this could damage the plastic casing, aluminum plate, or internal components.

### **Cleaning:**

Use a soft, damp cloth to gently clean the plastic casing and aluminum bottom plate. Avoid abrasive materials or harsh cleaning agents, as they may scratch the surfaces or damage the finish.

## SUPPORT, WARRANTY & RMA ASSISTANCE

For help with product support, warranty claims, or initiating an RMA (Return Merchandise Authorization), our website provides all the resources needed.

<https://revibeenergy.com/>

## RECYCLING

### Disposal of Electrical and Electronic Equipment

This product is marked with the crossed-out wheellie bin symbol to indicate that it must not be disposed of as general household waste. Instead, it should be taken to an appropriate collection point for recycling electrical and electronic equipment. Proper disposal helps prevent potential harm to the environment and human health and promotes the sustainable reuse of materials.

For more detailed information on disposal and recycling, please contact your local authorities or the retailer where the product was purchased.

# VS10-C TECHNICAL SPECIFICATION

## Power supply:

Lithium Ion Rechargeable battery 1.32 Wh.  
Charged via USB-C, 5V.

*Battery life up to 1 week (depending on configuration)*

## Power consumption:

Mode/configuration	Power consumption
Sampling rate: 1024 Hz, duration: 3 seconds, transmission interval: 5 minutes	~8 mW
Sampling rate: 8192 Hz, duration: 5 seconds, transmission interval: 5 minutes	~10 mW
Standby mode	<1 mW
Shelf mode	~4 $\mu$ W

## Enclosure material:

Bottom plate: Anodized aluminum alloy, color "Orange".  
Casing: PA6, Black.

## Ingress protection:

IP67

## Typical weight (w/ 3x 25mm pot magnets) :

250g.

## Dimensions (excluding mounting accessories):

90x60x38 mm (height x width x depth)

## Dimensions: (w. 2x 32mm pot magnets.)

90x60x46 (height x width x depth)

## Operating Temperature:

-40°C to +80°C

### **Storage Temperature:**

0°C to +45°C (-40°F to +140°F)

### **Relative humidity:**

0 to 95%, non-condensing

### **Mounting interface:**

- Multiple different hole patterns for pot magnets.
- 2x M6 threaded holes. Use M5 for through hole mounting

Refer to the 3D model for mounting hole patterns.

### **Radio communication:**

Tx Power:  
0 dBm

Rx Sensitivity:  
-98 dBm

Data Rates:  
Up to 1 Mbps

Frequency:  
2.400 to 2.483 GHz

Antenna Gain:  
typ. 6dBi

### **Acceleration measurements:**

3 Axis MEMS accelerometer  
TDK InvenSense IIM-42352

Range  
±16g

Sampling rate  
Selectable: 256, 512, 1024, 2048, 4096, 8192, 16384.

Sensor data filtering  
3dB point at  $\frac{1}{3}$  of the selected sampling rate.

Accelerometer frequency response  
XY-plane: dc to 4kHz (±3 dB point)  
Z-axis dc to 1.6kHz (±3 dB point)



**Temperature sensor measurement accuracy:**

Typ.  $\pm 0.5\text{ }^{\circ}\text{C}$   $-40^{\circ}\text{C}$  to  $125^{\circ}\text{C}$

Typ.  $\pm 0.25^{\circ}\text{C}$ ,  $0^{\circ}\text{C}$  to  $+65^{\circ}\text{C}$

**Edge data storage:**


Non persistent 64Mbit RAM.

**Time synchronization offset:**


Typ.  $<5\text{ }\mu\text{s}$

**Expected product lifetime:**

$>2$  years

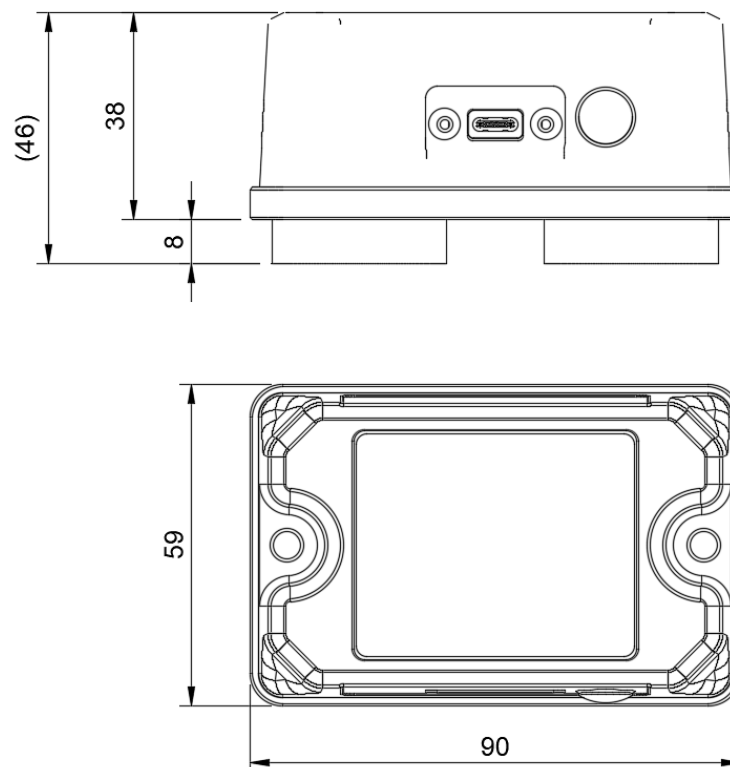**Bounding box**

## Accelerometer position

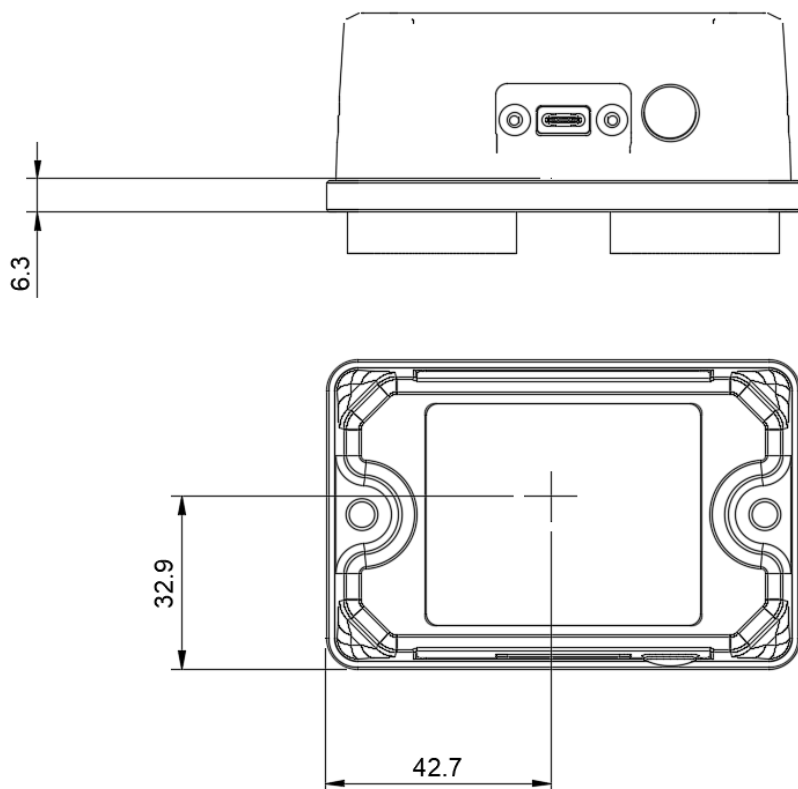

# CONTACT

## Manufacturer:

Revibe Energy AB  
Mölnadalsvägen 95  
412 63 Göteborg  
Sweden  
+46 (0) 31 24 23 22  
[www.revibeenergy.com](http://www.revibeenergy.com)

